

► **Application Note**

Licensing of Perception Park Software

Version 1.1.0 from 15/02/2018

Author: Matthias Karl

A license is needed in order to run software by Perception Park. This license is bound to the hardware of the computer on which they are being activated.

Without activation you can run only in demo mode for a restricted period of time

► Copyright

Copyright © 2017 STEMMER IMAGING AG, Puchheim.

All rights reserved and subject to change.

STEMMER IMAGING, Common Vision Blox, Windows, Visual Basic, Visual C++, C++Builder, Visual Studio.net, Visual C#, Delphi are registered trademarks.

All rights to this manual are the property of STEMMER IMAGING AG, Puchheim/Germany. It may not be reproduced or copied in printed, electronic or photographic form or translated into another language, either in whole or in part, without the written agreement of STEMMER IMAGING AG.

► **Content**

Content

1. Perception Core	4
License Activation	4
2. Perception Studio.....	4
License Activation of Perception Plug-ins.....	4
Get a License Request File of your Computer Hardware.....	4
Send the License Request files to STEMMER IMAGING	5
Activate Plug-Ins	5
3. Contact and Feedback.....	6

► Obtaining a License for Perception Park Software

1. Perception Core

License Activation

A license request file (LRQ) is written on first run of Perception Core and placed into the users "my documents" folder.

To get a license activation file (LAF), please share the LRQ with us (support@stemmer-imaging.de).

Place the license activation file (LAF) in the users "my documents" folder and run the Perception Core. Now, the log text of the Perception Core program should not contain "missing license" warnings anymore.


Alternatively, you can use the Perception Studio program to run the activation file - to activate a Perception Core.

2. Perception Studio

License Activation of Perception Plug-ins

Perception Plug-ins have to be licensed to your computer hardware. Without activation, you can run only in demo mode for a restricted period of time. The licensing process is described as follows.

When launching the Perception Studio program for the first time, the program will start by showing the *License Activation Dialog*. This dialog gives information about installed plug-ins and other information like elapsed time for demonstration usage. This dialog box allows you to generate a License Request File (LRF) and to load a License Activation File (LAF). When all plug-ins are licensed, this dialog will no longer appear when launching the program.

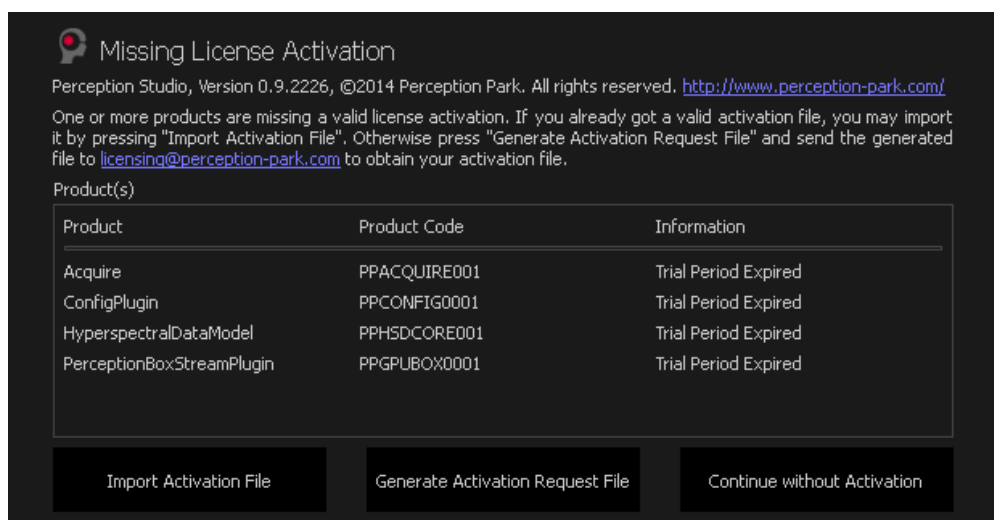

Get a License Request File of your Computer Hardware.

Click on the *Generate Activation Request File* button to obtain a file listing all plug-ins available and listing the hardware keys of your computer hardware.

► Obtaining a License for Perception Park Software

Send the License Request files to STEMMER IMAGING

To get a License Activation File (LAF) for the request files, which have been generated, please send the License Request File to STEMMER IMAGING technical support team (support@stemmer-imaging.de). The support team will send you the activation file.

Since STEMMER IMAGING is your software vendor, please do NOT send the License Request File to Perception Park without us knowing. This would confuse the order processing chain.

Activate Plug-Ins

To activate plug-ins to run on your computer hardware a license activation file has to be applied. Click on the *Import Activation File* button and import the appropriate file.

► Contact**3. Contact and Feedback**

We hope that this manual was useful for you and look forward to your feedback. In case of further questions, please do not hesitate to contact our technical support.

Additional information and a lot of valuable details regarding image processing, can also be found on our website.

DENMARK

Phone: +45 33 73 00 10
E-Mail: support@stemmer-imaging.dk
Web: www.stemmer-imaging.dk

FINLAND**BALTICS**

Phone: +358 9 43 555 012
E-Mail: support@stemmer-imaging.fi
Web: www.stemmer-imaging.fi

FRANCE

Phone: +33 1 45069560
E-Mail: support@stemmer-imaging.fr
Web: www.stemmer-imaging.fr

GERMANY**AUSTRIA**

Phone: +49 89 80902-200
E-Mail: support@stemmer-imaging.de
Web: www.stemmer-imaging.de

POLAND

Phone: +46 8 555 110 27
E-Mail: support@stemmer-imaging.pl
Web: www.stemmer-imaging.pl

SWEDEN**NORWAY · ICELAND**

Phone: +46 8 555 110 27
E-Mail: support@stemmer-imaging.se
Web: www.stemmer-imaging.se

SWITZERLAND**LIECHTENSTEIN**

Phone: +41 55 415 90 90
E-Mail: support@stemmer-imaging.ch
Web: www.stemmer-imaging.ch

THE NETHERLANDS**BELGIUM · LUXEMBOURG**

Phone: +31 575 798881
E-Mail: support@stemmer-imaging.nl
Web: www.stemmer-imaging.nl

UNITED KINGDOM**IRELAND**

Phone: +44 1252 780060
E-Mail: support@stemmer-imaging.co.uk
Web: www.stemmer-imaging.co.uk